

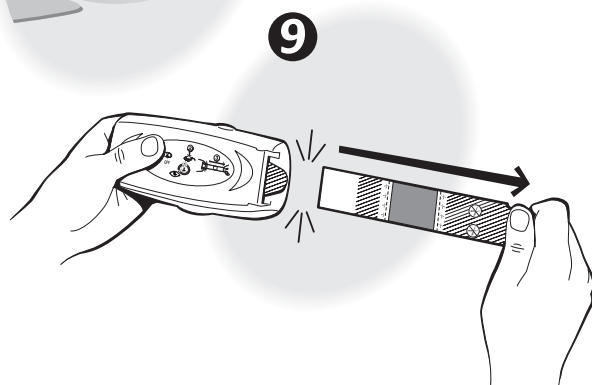
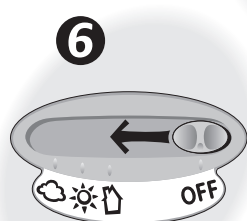
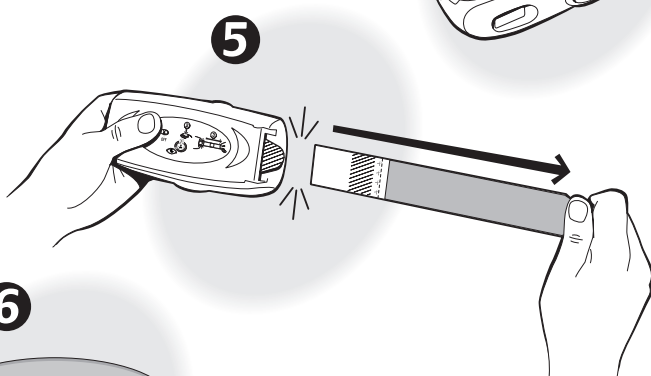
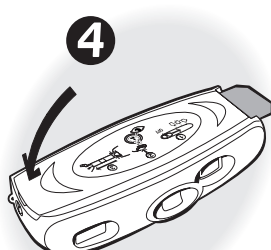
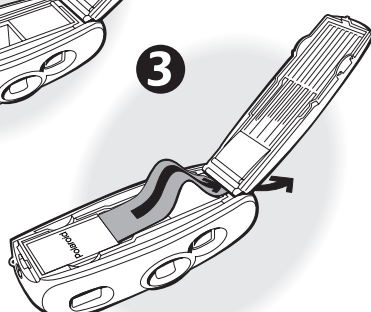
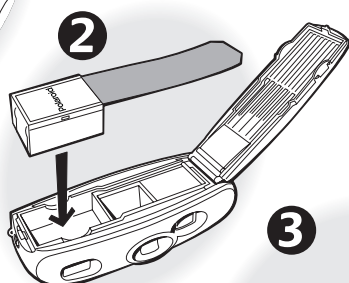



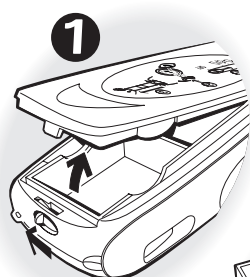


Convertible Camera

User Guide

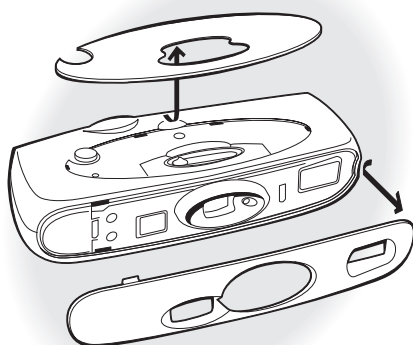

DO NOT CUT INTO PHOTOS. To prevent exposure to caustic paste, cut where indicated.

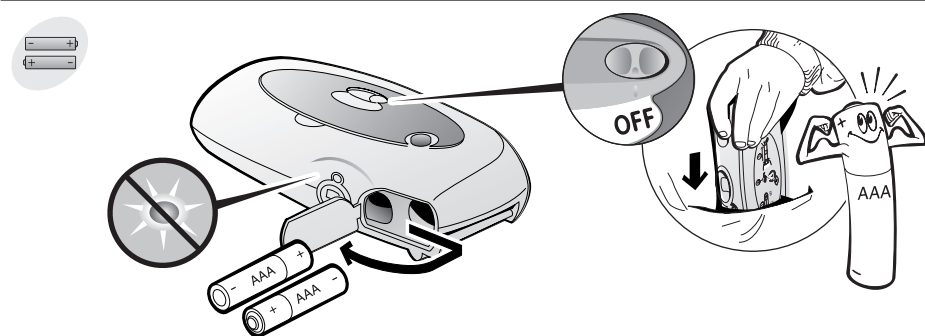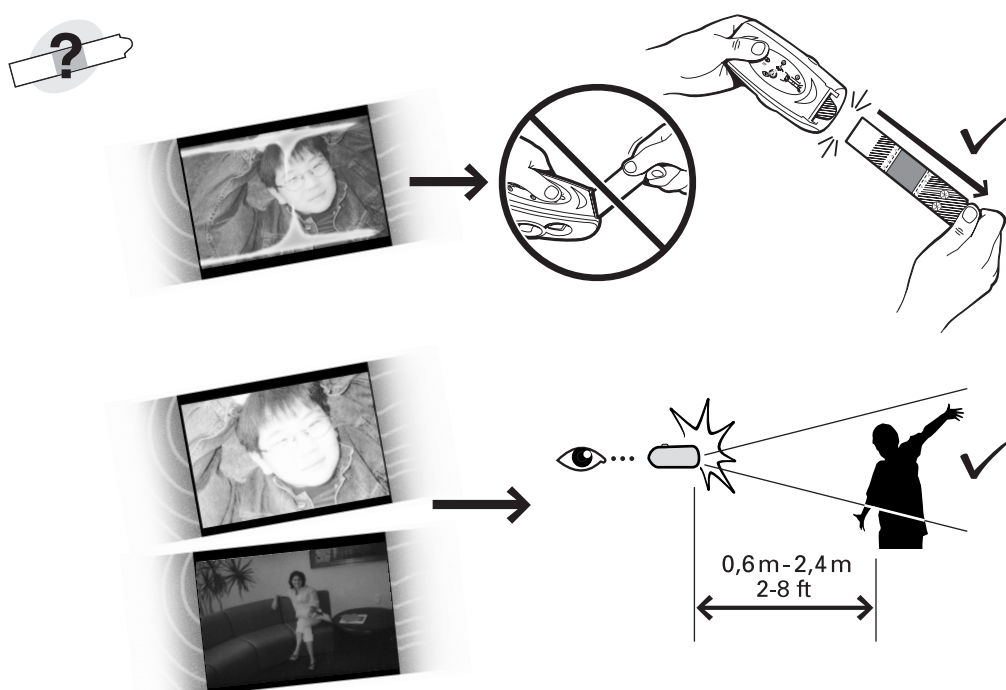

Change batteries when light does not glow.

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

WARNING: CHOKING HAZARD. Contains small parts. Not suitable for children under 3 years. Use under adult supervision. For ages 8 and older.

Caution: This camera is battery operated. To avoid electrical shock, do not expose to or immerse in water or other fluids, disassemble, or operate if dropped or damaged. Call Polaroid at 1-800-343-5000 for repair information, or visit us on the Web at www.polaroid.com > Customer Service. Follow local legal requirements for disposing of or recycling the non-hazardous, AAA alkaline batteries.

Film Caution: This film contains caustic paste. If paste appears, avoid contact with skin, eyes and mouth and keep away from children and animals. If you get some paste on your skin, wipe it off immediately and wash with water to avoid an alkali burn. If eye or mouth contact occurs, quickly wash the area with plenty of water and see a doctor.

One Year Limited Warranty: Polaroid will, at our option, repair or replace any unit found defective in manufacture within the warranty period. The warranty period is determined by the date of camera purchase. Keep receipt as proof of purchase. Otherwise the warranty period is determined by the date of manufacture. This warranty does not apply to damage caused by accident, misuse or tampering and excludes all consequential damages except in jurisdictions not allowing such exclusions or limitations. This does not affect your statutory rights.